



Silo phone star codes.

Many of your digital phone service features can be controlled directly from your phone. Your service uses the following “Star(*) Codes.”

| | |
|-----|---|
| *62 | Check Voicemail |
| *65 | Block your Outbound Caller ID for all calls |
| *85 | Reactivate your Outbound Caller ID if you have it blocked |
| *67 | Block your Outbound Caller ID for just the next call |
| *69 | Callback the last number that called in |
| *72 | Turn on Call Forwarding for all calls |
| *73 | Turn off forwarding all calls |
| *90 | Turn on Call Forwarding if the Line is Busy |
| *91 | Turn off Call Forwarding if the Line is Busy |
| *92 | Turn on Call Forwarding if there is no-answer |
| *93 | Turn off Call Forwarding if there is no-answer |
| *74 | Add a number to my Speed dial 8 list |
| *75 | Add a number to my Speed dial 100 list |
| *77 | Turn on Inbound Anonymous Call Blocking |
| *87 | Turn off Inbound Anonymous Call Blocking |
| *81 | Add a number to your Blocked Calls List |
| *82 | Delete a number from your Blocked Calls List |
| *78 | Turn On Do Not Disturb |
| *79 | Turn Off Do Not Disturb |

Your phone service also has “Speed Dial 8” and “Speed Dial 100”

[2-9]# To dial a number that you have set into your Speed dial 8 list, you would dial the number you associated with the speed dial followed by the pound sign (#).

#[00-99] To dial a number that you have set into your Speed dial 100 list, you would dial the pound sign (#) followed by the two digit number you associated with the speed dial.